 
 
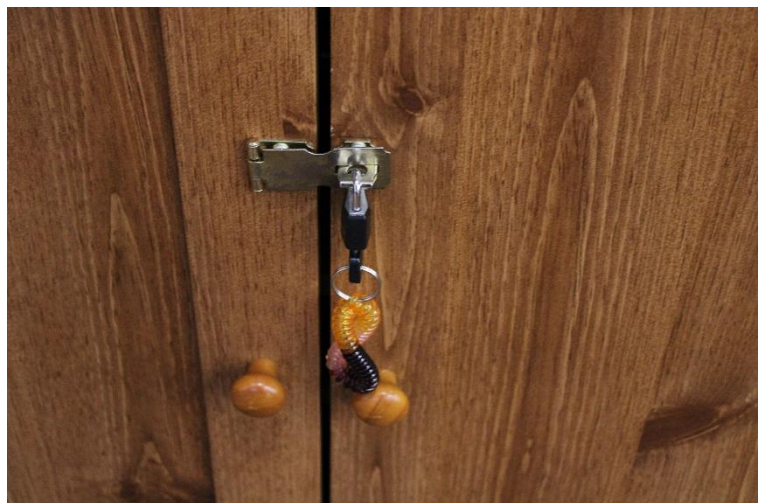 
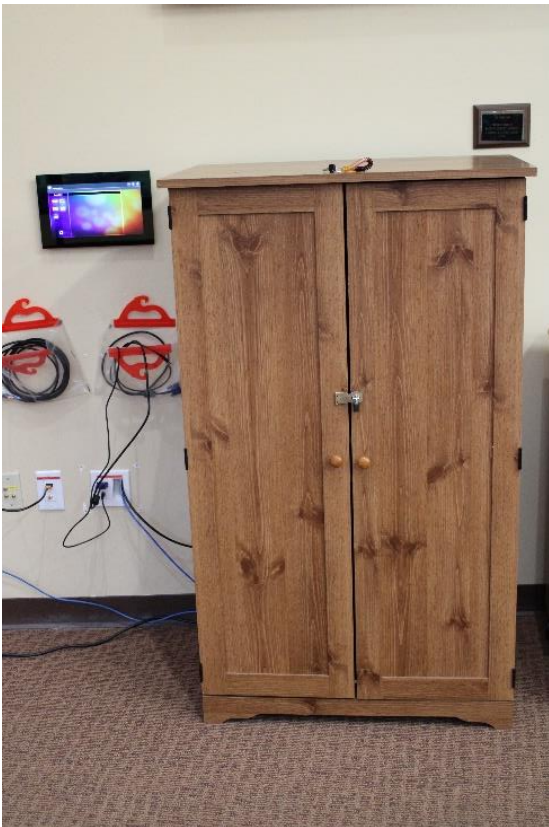 


## USING THE BLU-RAY PLAYER WITH THE CEILING PROJECTOR IN THE LIBRARY'S COMMUNITY ROOM

- **Unlock the padlock on the cabinet (using the key sitting on top of the cabinet; if not there, please ask for it at the circulation desk).**

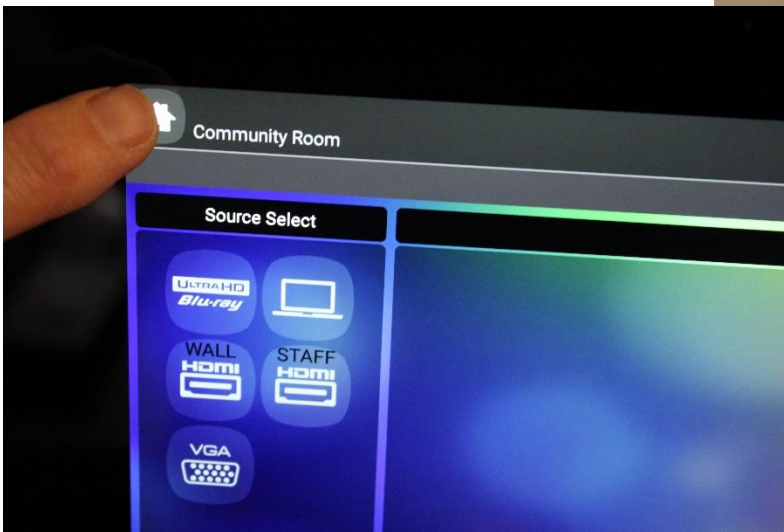

- To turn-on the ceiling projector, on the Wall Control Panel, press the House Icon (in the upper left-hand corner, next to “community room.”)

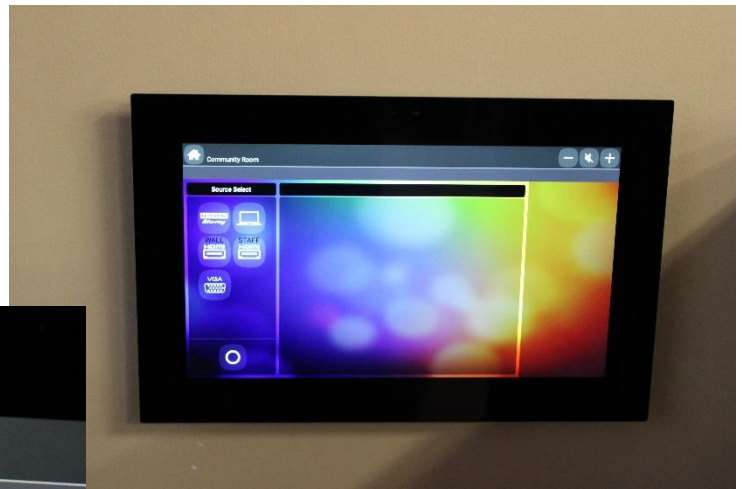

- On the Wall Control Panel, under “Source Select,” press the BLU-RAY icon.



- It will take approximately 10 seconds for the ceiling projector to recognize the Blu-Ray Player as the projection source. You should see the Blu-Ray screen being projected onto the big screen in the front of the community room.



- Inside the cabinet is the BLU-RAY PLAYER. On the Wall Control Panel, press the OPEN TRAY icon, insert your Blu-Ray disc into the player, and press the OPEN TRAY icon again to close the disc tray.






- Use the controls on the Wall Control Panel to operate the Blu-Ray Player.




- When finished showing your movie, don't forget to remove your Blu-Ray disc from the player by pressing the OPEN TRAY icon to eject the disc tray. (Please be sure to press the OPEN TRAY icon again to close the disc tray into the player.)

## TURNING OFF THE CEILING PROJECTOR & BLU-RAY PLAYER

- To turn-off the ceiling projector and Blu-Ray Player, on the Wall Control Panel, press the O icon (in the lower left-hand corner).

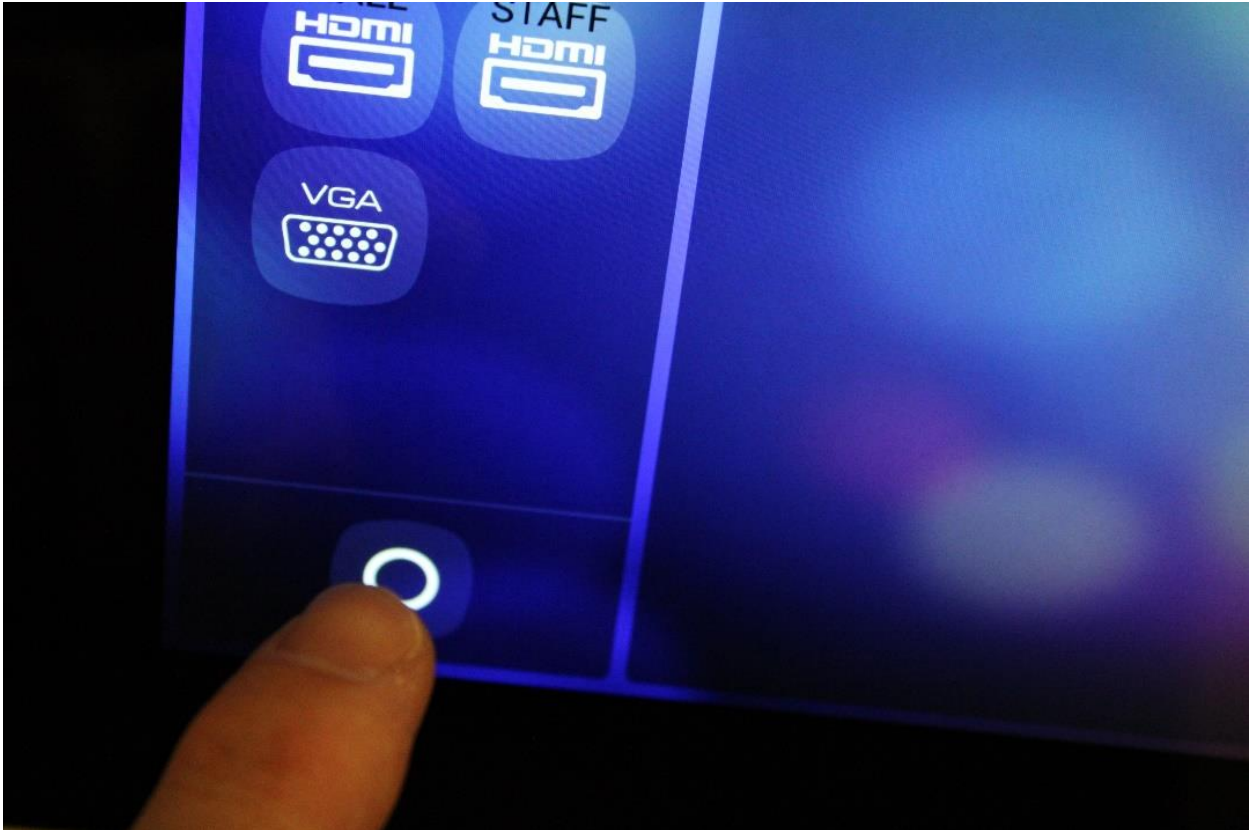

- **Look at the projector screen in the front of the community room. You should see a pop-up window stating that the projector is powering down.**

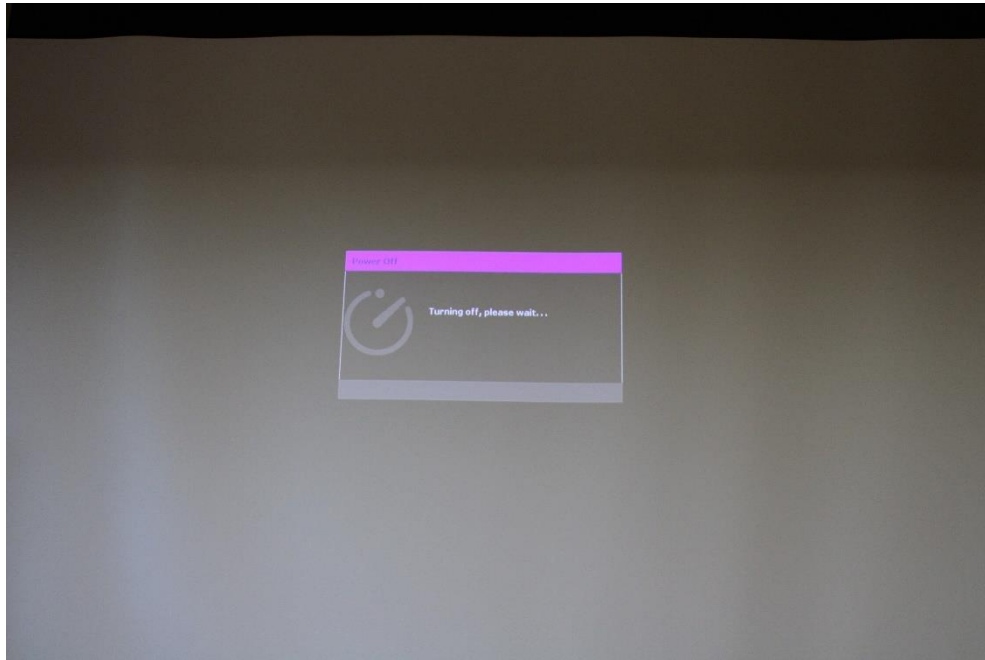

- **Look at the ceiling projector to make sure it has turned off. There should be no light shining out of the projector lens. (The orange light on the ceiling unit stays on in “standby” mode, so this is nothing to be concerned about.)**
- **If you lock the cabinet, please be sure the padlock key is left on top of the cabinet (NOT inside). Thanks.**