

USING THE VOLUME CONTROLS WITH THE CEILING PROJECTOR IN THE LIBRARY'S COMMUNITY ROOM

- Use the Wall Control Panel to regulate sound volume for the ceiling projector. The + icon increases volume; the – icon decreases volume. (Please disregard the mute volume icon on the panel.) (NOTE: The master sound system must be turned on inside the rear closet, next to the community room entrance, for sound to function. Please ask staff to assist.)

